




www.namzccp.com

NAMZ Custom Cycle Products, Inc

1440 Ulmer Avenue
Oreland, PA 19075

Technical Support is available Monday-Friday, 9am-5pm EST via email at tech@namzccp.com or call us at 1-877-277-NAMZ.

Part Number: ILL-IND-FR & ILL-IND-FR2

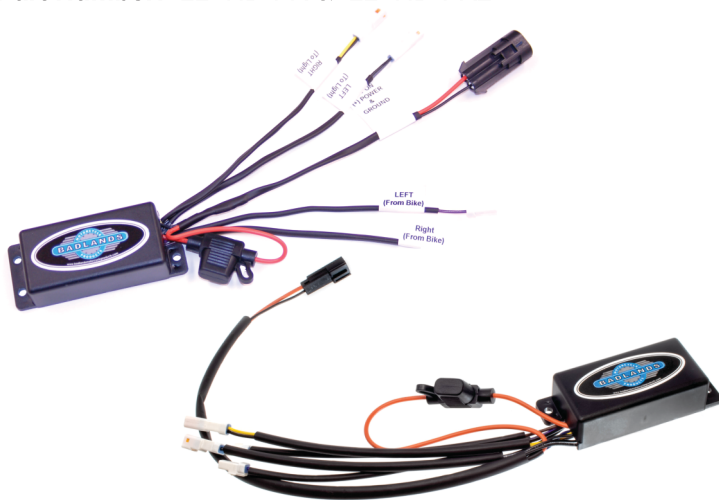

Fitment: ILL-IND-FR: Plug-n-Play Illuminator™ adds running light function to existing front turn signals for brighter visibility. (RUN-TURN with LEQ™) (All Indian Big Twin Models 2014 through 2017)

ILL-IND-FR2: Plug-n-Play Illuminator™ adds running light function to existing front turn signals for brighter visibility. (RUN-TURN with LEQ™) (All Indian Big Twin Models 2018 - Up)

About this product: As the industry “originals” in lighting modules since 1990 our Badlands Illuminator™ Modules provide the running light feature to OEM front turn signals on Big Twin Indian Models. This module simply plugs in between the front turn signal connectors with another plug for power and sends both turn signal and running light functions to the front signals that were only turn signals from the factory. We manufacture all Badlands modules here in Philadelphia, PA with the highest standards, using only quality components, that are built to last backed by a LIFETIME WARRANTY.

What is included in this kit?

- (1) Plug-n-Play Illuminator™ Module
- (2) Zip-ties

Recommended tools:

- Phillips Head Screwdriver
- Flashlight

WARNING!

This product should be installed by a professional motorcycle technician or reputable shop/ dealership.

Improper installation may result in loss of Taillight functions.

Installation instructions

1. Disconnect the battery first!
2. Refer to your users manual for detailed instructions on battery location/removal.
3. Begin by removing the front headlight.
4. Locate the front fairing screws that secure the outer fairing to the inner fairing using your service manual.
5. Start removing the screws from the bottom first, working your way up to the top last. This will help you to secure the outer fairing when removing the last screws.
6. Locate a safe place to rest the painted outer fairing to prevent damage.
7. Once removed, locate the LEFT and RIGHT white, 2-position connectors attached to your front turn signals.
8. Also locate the power connector.

NOTE: The only difference between part numbers ILL-IND-FR and ILL-IND-FR2 is the power connector. The factory changed this connector in 2018.

9. Once you found the power connector, you can install the module.
10. Connect the module to the power connector by simply plugging it in.
11. Disconnect the left and right turn signal connectors by pressing down on the tab to release the connection.
12. Once disconnected, simply plug our module in between the main harness connector and the turn signal connector until you hear a clicking sound. This will let you know that the connectors are engaged.
13. Use the included cable ties to secure loose wiring to prevent from getting in the way of moving parts.
14. Reconnect the battery and test to be sure you now have running lights and turn signal functions on the front signals lights before reinstalling the outer fairing.