



## NAMZ Custom Cycle Products, Inc

1440 Ulmer Avenue  
Oreland, PA 19075

Technical Support is available Monday-Friday, 9am-5pm EST via email at [tech@namzccp.com](mailto:tech@namzccp.com) or call us at 1-877-277-NAMZ.

Part Number: NHCX-MB04, MB08, MB12, MB15



Fitment: 2007-2013 Harley Davidson - Dresser Models

**This product is intended:** NAMZ Handlebar Control Extension kits (4", 8", 12" & 15") provide an easy way to extend all the OEM wiring to your handlebar switches without having to cut strip crimp or solder. All that work is done for you by the professionals. Installs in minutes and makes handlebar extension jobs go that much quicker and smoother!

### What is included in this kit

- (26) OEM Color Matching wires (pre-crimped and ready for installation).
- (26) 3/16" x 2.5" heat shrink for each connection.
- (2) 1/2" heat shrink (2", 6", 10" or 13") length depending on size of kit.

### Recommended Tools:

- NMTRT-01 (Molex MX-150 Terminal Removal Tool)
- Heat Shrink Gun
- Diagonal Cutters

### WARNING!


This product should be installed by a professional motorcycle technician or reputable shop/ dealership.  
Improper installation may result in loss of Handlebar Control Functions.

### Installation instructions:


1. DISCONNECT THE BATTERY FIRST!
2. Locate your Gray (left) and Black (right) Molex handlebar control connections.
3. Disconnect the handlebar switch harness connections.
4. Remove the wiring from the handlebar connectors using the NAMZ: NMTRT-01 (Molex MX-150 Terminal Removal Tool)

**NOTE:** Be sure to take note of what wire was in what position or refer to your service manual schematic to confirm BEFORE removing your wires from the OEM connector.


5. How to remove the wires from the connector:

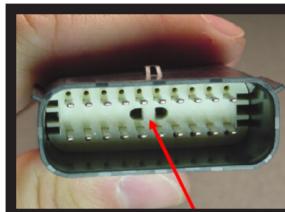


1. Place small needle nose pliers into the service holes in the male connector.

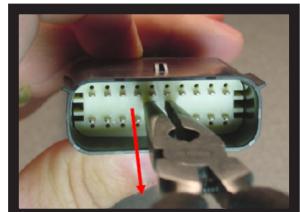

2. Pull outward on the pliers, listen for a click then the TPA will be unlocked.

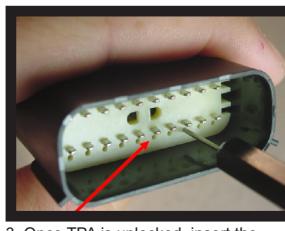

3. Once TPA is unlocked, insert the removal tools as shown & pull wire to remove from connector housing.

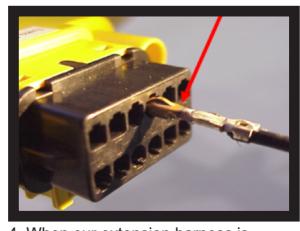

4. When our extension harness is installed onto the factory switch wiring, re-install the male terminals into the connector as shown.

6. Once the Molex Connectors have been removed from your handlebar switch harness, simply match the colored wire with the mating terminal found on the extension harness.

(Be sure to cover the terminals with the 2.5" long heat shrink allowing 1/2" overlap on each side.)

7. Heat the shrink tubing in place on each terminal splice and allow the tubing to cool for a few minutes before reinstalling.
8. When all connections have been made, cover the extension harness with the heat shrink provided.
9. Put the wires back into the OEM connectors and reconnect to the bike.
- 10 Check all functions before final reassembly.

Harley Davidson Handlebar Controls, (Baggers)

2007 - 2013

Left Side

ORANGE/BLACK  
GRAY/GREEN  
GREEN/BLUE  
PINK/WHITE  
BROWN/BLACK  
VIOLET/BLACK  
YELLOW/BLACK  
WHITE/VIOLET  
WHITE  
BLUE  
YELLOW  
ORANGE/WHITE  
BLACK  
BLACK/RED

Right Side

ORANGE/WHITE  
RED/BLUE  
GRAY  
WHITE/BLACK  
WHITE/BROWN  
BLACK/RED  
BROWN/WHITE  
GRAY/WHITE  
PINK/WHITE  
VIOLET/BLACK  
WHITE/BLUE  
BLUE/BLACK