

# Letric Lighting Co.

MOTORCYCLE LIGHTING

[www.namzccp.com](http://www.namzccp.com)

## NAMZ Custom Cycle Products, Inc

1440 Ulmer Avenue  
Oreland, PA 19075

Technical Support is available Monday-Friday, 9am-5pm EST via email at [tech@namzccp.com](mailto:tech@namzccp.com) or call us at 1-877-277-NAMZ.

Part Number: LLC-PSBF-B



**Fitment:** 2014-Up Street Glide, Road Glide, Road King, Ultra, Electra Glide & CVO Models with exposed (oval opening) saddlebag brackets.

**This product is intended:** Our Plug-N-Play Premium Saddlebag Fillers provide the additional lighting needed for 2014-UP Touring Models while also filling the oval openings in the saddlebag support bracket. This provides a cleaner look for the rear of the bike and increases the safety of the motorcycle by adding additional Running Lights, Brake Lights and Turn Signals on all models except Road Kings and Police models which will only have Running Lights and Turn Signal functions. With a smooth black finish and an easy installation, these lights are sure to complete the appearance of any 2014-Up Touring model.

### What is included in this kit?

- (2) Premium Saddlebag Filler Lights
- (1) Plug-N-Play Harness
- (2) Zip-Ties
- (2) 1x1" Double Sided Tape

### Recommended Tools:

- Phillips Head Screwdriver

- T40 Torx Bit
- T45 Torx Bit
- 1/2" Box Wrench
- 9/16" Box Wrench
- Torque Wrench

### WARNING!

*This product should be installed by a professional motorcycle technician or reputable shop/dealership. Improper installation may result in loss of taillight/brake light functions.*

### Installation Instructions:

1. Remove the seat using Phillips Head Screwdriver and set aside.
2. Remove the saddlebags and set aside.
3. Locate the Rear Fender Harness connector located under the seat to the left side of the motorcycle, see Figure 1.1.
4. Disconnect the connection by depressing the locking tab on the connector.

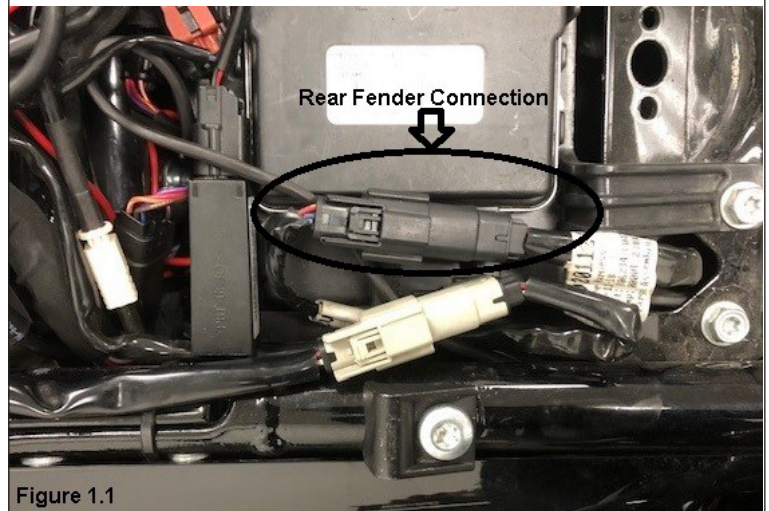


Figure 1.1

5. Install the included Plug-N-Play harness between the rear fender harness connection. (Figure 1.1) Be sure that the connectors are fully seated and locked.
6. The Plug-N-Play harness is labeled Left-Side & Right-Side. Route the Right-Side harness and Left-Side Harness between the fender and frame. (Figure 2.1) Using zip-ties, secure the both sides of the harness to the frame. (Figure 2.2)



Figure 2.1

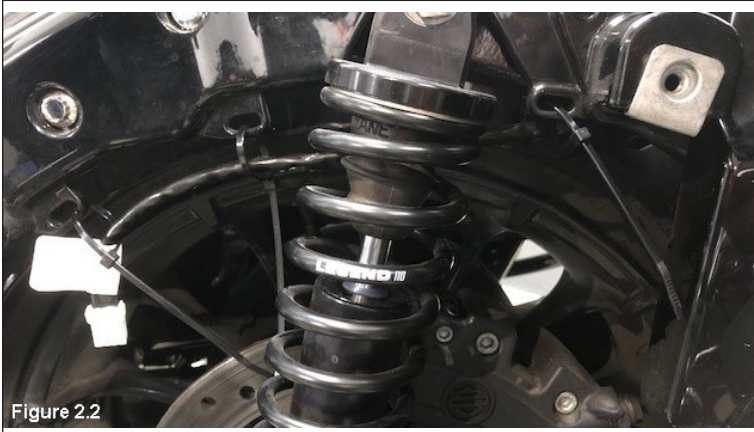


Figure 2.2

**WARNING!**

Be sure that the harnesses (both Left and Right) are secure (not pinched) and away from all moving parts (chain/belt, suspension, wheel/tire, brakes, etc.).

- Apply the 1x1" double sided tape to the top of the light Figure 2.3.

Apply Double Sided Tape Here



Figure 2.3

7. Remove the inner saddlebag support bolts using the T40 Torx and 1/2" Box Wrench (Figure 3.1)
8. Remove the outer saddlebag support bolts using the T45 Torx and 9/16" Box Wrench (Figure 3.1)

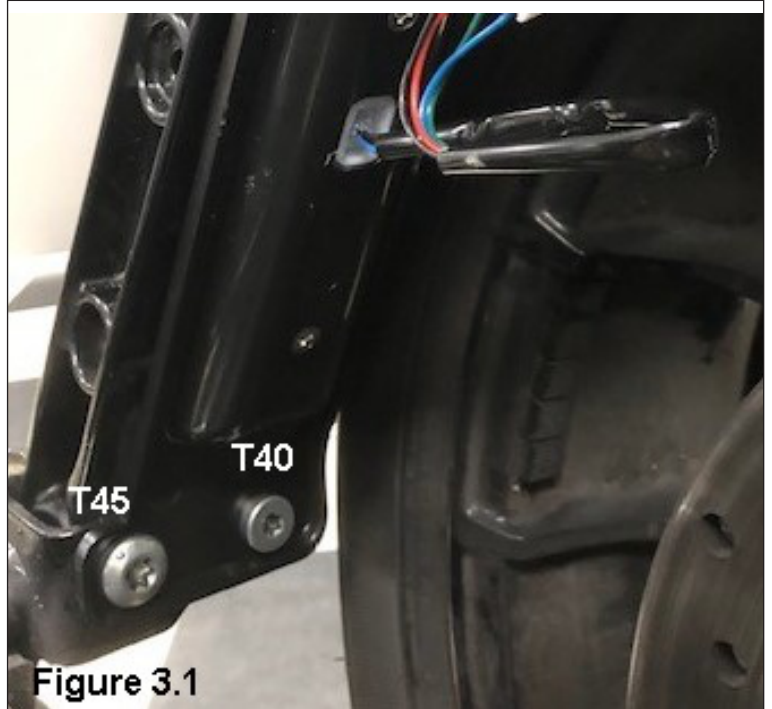


Figure 3.1

9. Clean the area where the double-sided tape will contact and install the Filler Lights by pinching the lower exterior of the light and sliding the light into place Figure 3.2. Be sure the double-sided tape is fully stuck to top of support bracket.

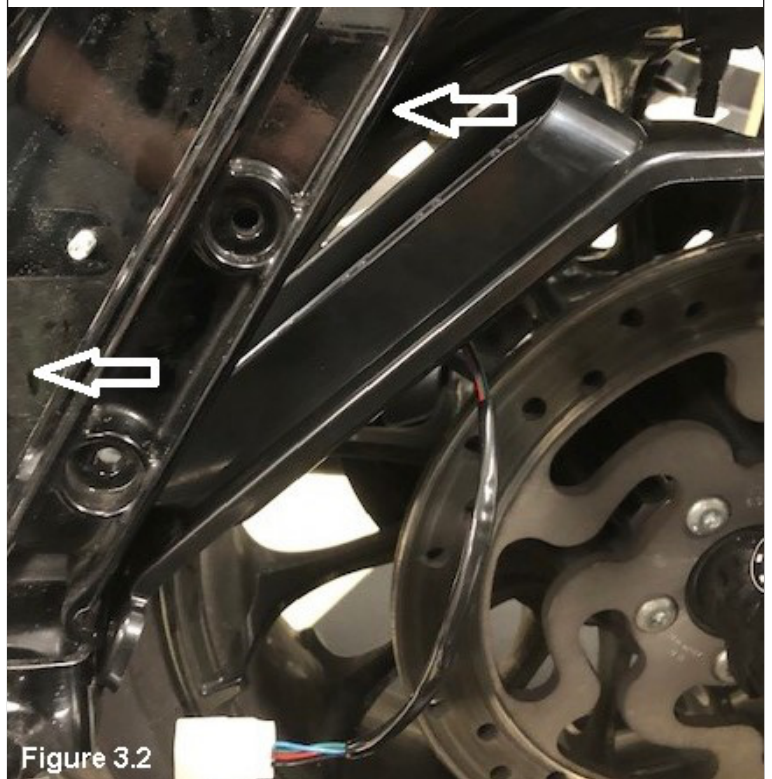


Figure 3.2

10. Reinstall the saddlebag support bolts and torque bolts. (Figure 3.1)
11. Connect the lights to the Plug-N-Play harness. Be sure that the harness is secure and no wires are pinched or will contact any moving parts.
12. Confirm proper functioning and reinstall seat/saddlebags.