



MOTORCYCLE LIGHTING


[www.namzccp.com](http://www.namzccp.com)

**NAMZ Custom Cycle Products, Inc**

1440 Ulmer Avenue  
Oreland, PA 19075

Technical Support is available Monday-Friday, 9am-5pm EST via email at [tech@namzccp.com](mailto:tech@namzccp.com) or call us at 1-877-277-NAMZ.

**Part Number:** LLC-IHAH

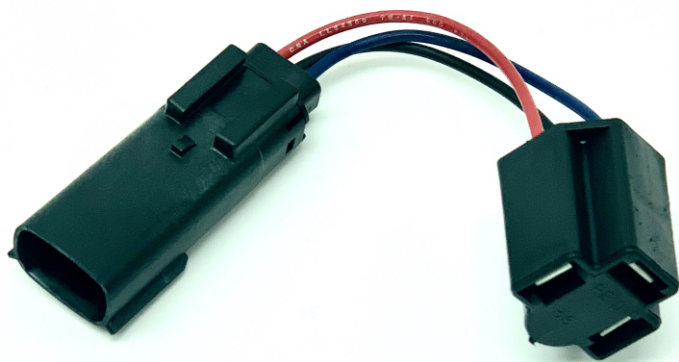

**Fitment:** Indian Headlamp Adapter Harness, Fits all 2020-Up Indian Models with OEM headlamp, except Scout, FTR. (Made in the USA)

**This product is intended:** Our Indian® headlamp adapter is a must when swapping out an OEM headlamps. This simple plug-n-play harness allows you to install Letric Lighting Co. or any other aftermarket LED headlamps on 2020-Up Indian® models already equipped with 7" headlamps. Made in our Pennsylvania building and installs in minutes!

**What is included in this kit?**

- Headlamp adapter harnesses

**Recommended Tools:**

- 5mm Allen Wrench
- Phillips Screwdriver

**WARNING!**

*This product should be installed by a professional motorcycle technician or reputable shop / dealership.*

*Improper installation may result in loss of headlamp functions.*

**Installation Instructions: (Fairing Models)**

1. Be safe and disconnect the negative battery cable.
2. Begin by removing the (2) 5mm allen head screws that are located on the chrome bezel. Once removed, gently pull off the chrome bezel.
3. Once the bezel has been removed, locate the (3) phillips screws that secure the headlamp carrier to the headlamp bracket.
4. While supporting the OEM headlamp, begin to remove the (3) phillips screws.
5. Now removed, with one hand remove the headlamp carrier and put aside.
6. With your other hand, remove the headlamp and disconnect the wiring harness from the back of the light.
7. Simply connect our harness to your new LED headlamp using the H4 connector and attach the other side of our harness to the factory wiring harness using the Molex connector.
8. Be sure to connect the battery and test before re-installing.

**Installation Instructions: (Non-Fairing Models)**

1. Be safe and disconnect the negative battery cable.
2. Using the phillips screwdriver, remove the screw under the headlamp trim ring to remove the bezel.
2. Once removed, connect our harnesses to your new LED headlamp using the H4 connector and attached the other side of the harness to the factory wiring harness using the Molex connector.
4. Now connect the battery and test before re-installing.

# Letric Lighting Co.

MOTORCYCLE LIGHTING

[www.namzccp.com](http://www.namzccp.com)

## NAMZ Custom Cycle Products, Inc

1440 Ulmer Avenue  
Oreland, PA 19075

Technical Support is available Monday-Friday, 9am-5pm EST via email at [tech@namzccp.com](mailto:tech@namzccp.com) or call us at 1-877-277-NAMZ.

Below you will find a diagram of how to remove the headlamp bezel for proper installation of our LED headlamp adapter.

